



The plug shown in the leftmost photo is supplied with the battery and needs to be fitted into the "EXT RESET" port. There is a Black, Red & Yellow cable on the plug. The yellow cable stays blank while the Black and Red cable are to either end of a momentary switch. To reset the BMS you need to hold the switch while applying  $\geq 12.8V$  charge voltage to the battery. **Do not hold the switch for too long!**

